


Subject: Ensure **TOF** functionality for **Vector Skynode**


Please check the following two steps to ensure that the function Time of flight (ToF) can work properly, which is very important for GNSS denied navigation.

1. Datalink ID settings in the WebUI for all Vector Skynode.

Under Settings and "Set Datalink ID" enter the ID of the installed Silvus Air Modem (ID is located on the main fuselage label under the battery cover) and click "Enter Datalink ID"!

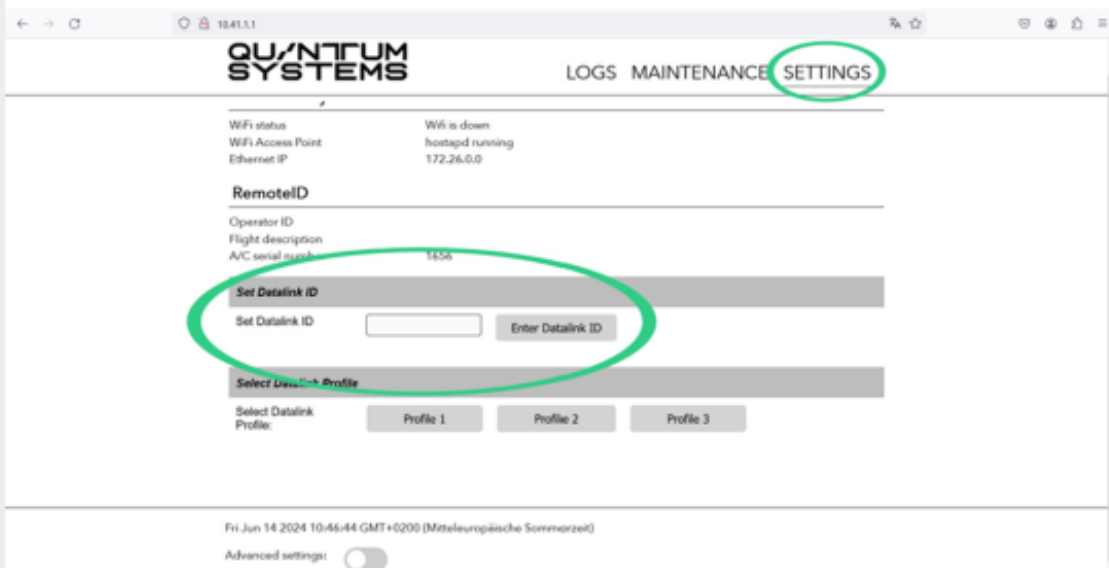

2. In addition, the correct Ground Modem ID must be entered in the QBase DataLink Settings window. This is a required entry to use the TOF feature.
 - Ground Modem ID can be read from the label on the Silvus radio
 - Aircraft ID is located on the label under the battery cover

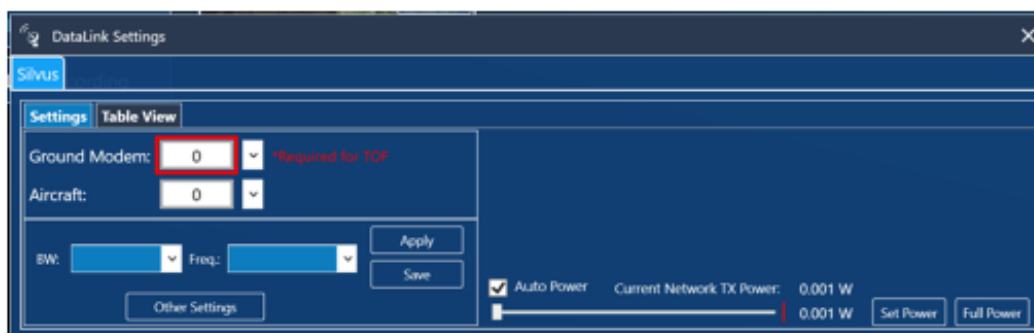

If this ID is not set, the Vector will fly without ToF data and navigation in GNSS denied mode which will be significantly more difficult.