



Vector Skynode | Multicharger | 35.5.2.29

General

- Improved discharge of CCCV board after power supply outage
- more stable internal communication

How to update:

1. Copy smartcharger firmware file (.scu) to empty USB Stick.
2. Make sure no batteries and devices are connected to MultiCharger.
3. Switch on MultiCharger.
4. Use arrow keys to navigate to the UPDATE page.
5. Press OK button and insert USB Stick to upper USB port as indicated on the display.
6. Remove USB Stick when prompted.
7. Wait for update to complete. The update process performs multiple restarts and may take up to 5 minutes.
8. The update is complete when the CHARGE page is shown on the display.