



Vector Skynode & non-Skynode | Silvus Firmware | 4.0.4.1

How to update:

Please see manual "ITS083_VS_SilvusFWUpdate_20240206"

For 10W Handhelds use ss4_4200P_v4.0.4.1.

For older Handhelds use ss4_4200_v4.0.4.1.

For 4400 Silvus use ss4_4400_v4.0.4.1.